


Town & Country

VEHICLE SEAT COVERS

Ford Transit Custom Double Fitting Guide


1 Remove headrest from seat. Caution, the headrest stalks can be coated with a small amount of grease.

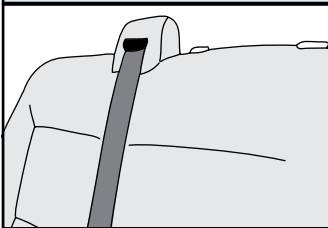


2 Undo central Velcro and place cover over seat. Pull the cover firmly over the seat. Note, the gap between the back of the seat and the vehicle's bulkhead can be tight, force the cover into place one side at a time.





3 Align headrest plastic insertion points with the holes in the seat cover.

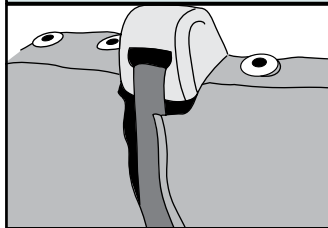

4 Pull open the base of the seat to access the under seat storage. Pull tight and fasten central Velcro from top to bottom, keeping it as equal and square as possible.

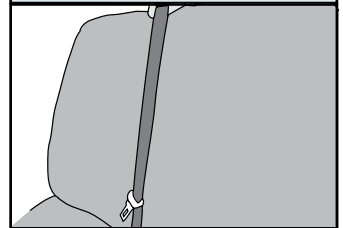

5 Pull the velcro under and through to attach to the corresponding velcro on the back of the cover.

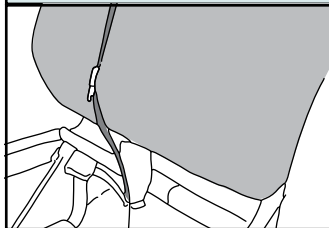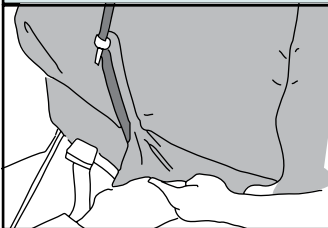

6 Lift the middle seat and place the cover over the top.



7 Pull the sides through the gap between the two cushion, lifting the other cushion can help.



8 Hook the elastic rope over the corners of the seat cushion to secure in place.



9 Pull the elastic rope tight lifting the plastic toggle into place.



10 Place the cushion back in place making sure the lift tab and seatbelt plugs are out of the way.



11 To fit the headrest make sure the tab is at the front.



12 Pull over headrest.



13 Pull the tab around the base of the headrest fitting the holes between the slits, push under the edge of the headrest and secure the velcro.



14 Replace the headrests on the squab.

